

KitchenAid®


ELECTRIC COMBO WALL OVEN

MODELS:

KOCE900HSS23 (Stainless)

KOCE900HBS23 (Black Stainless)


CONTROL PANEL PARTS

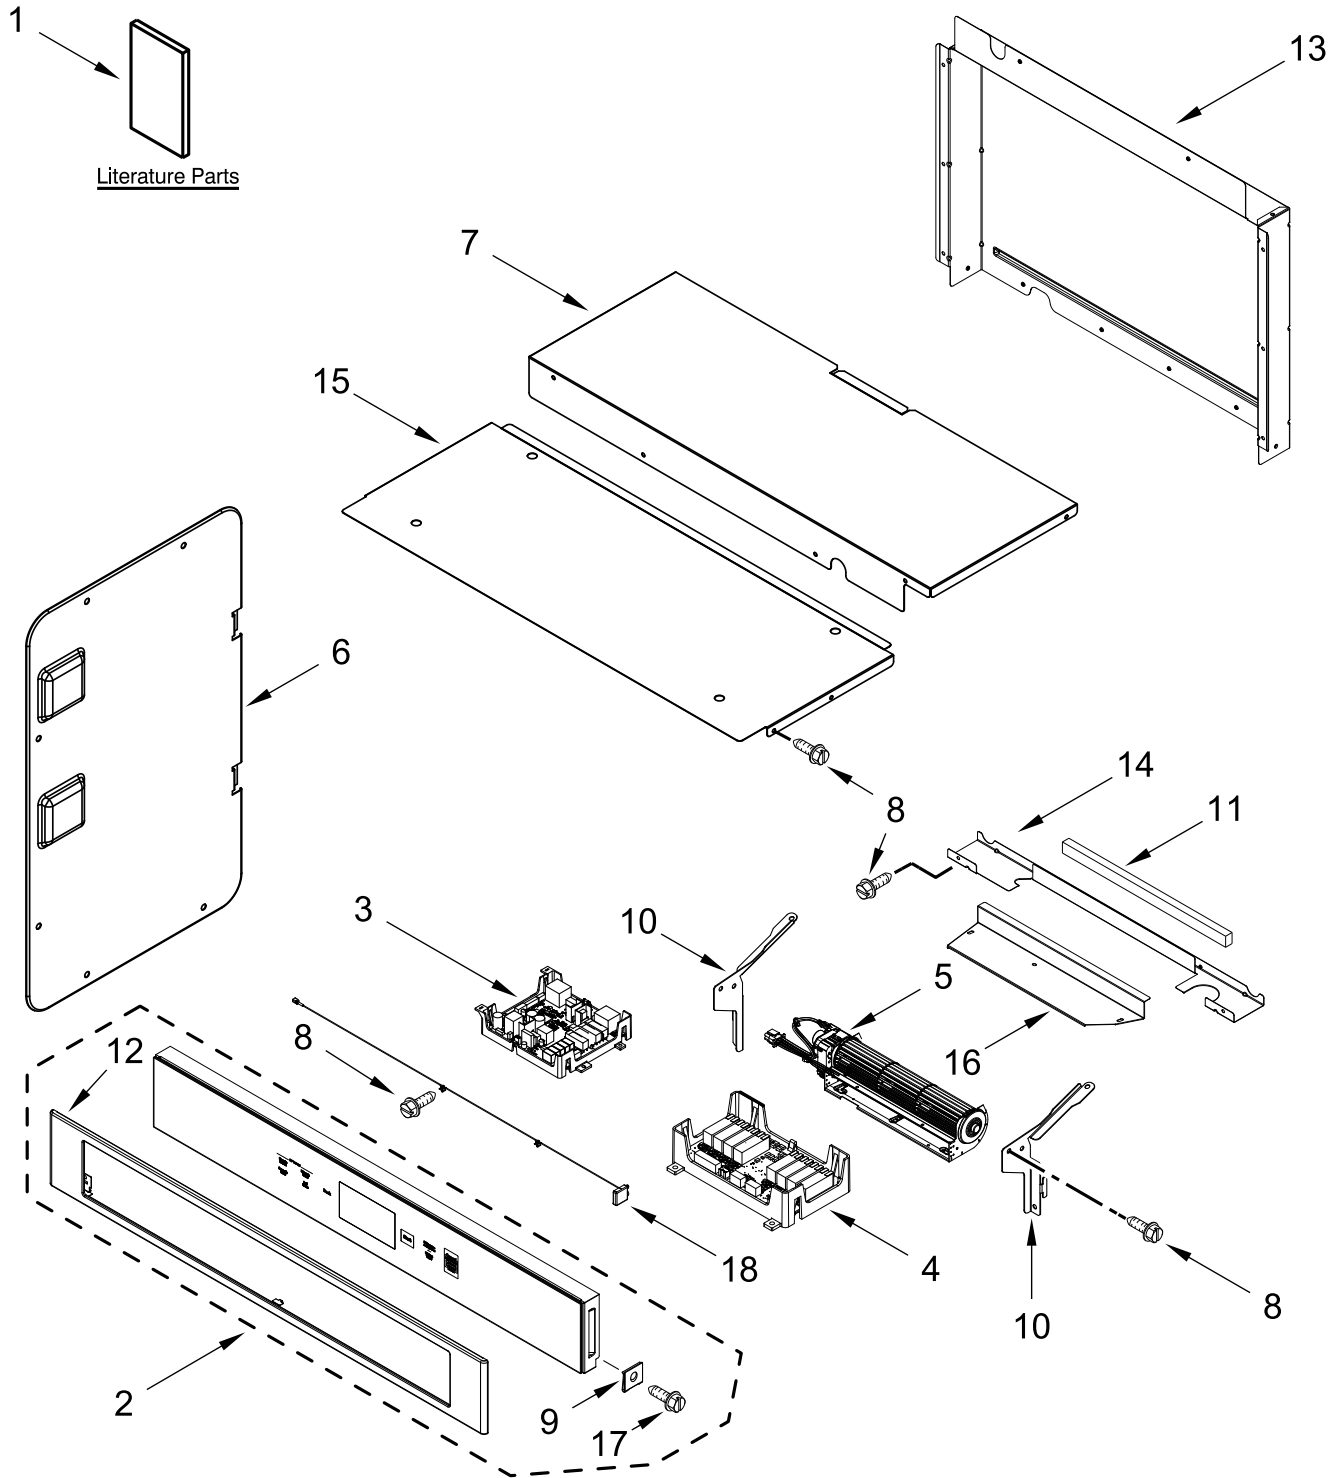

CONTROL PANEL PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	9	4450118	Nut	18	W11409842	Antenna
	W11382204	Owner's Manual	10	W10655463	Bracket, Blower (Left)			FOLLOWING PARTS NOT ILLUSTRATED
	W11382210	Quick Start Guide		W10655462	Bracket, Blower (Right)		W11659375	Harness, Main
	W11423746	Tech Sheet					W11319486	Harness, Signal
2		Assembly, Console	11	4451758	Block, Foam		W11264646	Harness, Door Latch
	W11304146	Stainless	12		Skin, Control Panel		W11356990	Harness, Communication
	W11304148	Black Stainless		W10588740	Stainless			
3	W10850871	Control (Copernicus)		W10776407	Black Stainless		W11356991	Harness, Ground Console Combo
4	W10890118	Appliance Manager, Expansion	13	W11171004	Cover, Combo Chassis Back Duct			
5	W11397930	Blower	14	W11166802	Divider, Chassis Back		313438	Clip, Harness
6	W10655467	Chassis, Combo Side	15	W10318158	Chassis, Cover Top Front 30 IN		4450800	Screw, Grounding
7	W10588732	Chassis, Cover Top Back 30 IN	16	W10681157	Cover, Combo Blower		4448664	Clamp, Conduit
8	7101P426-60	Screw	17	W11339492	Screw (Black)		W11394923	Bag, Hardware


CABINET AND STIRRER PARTS

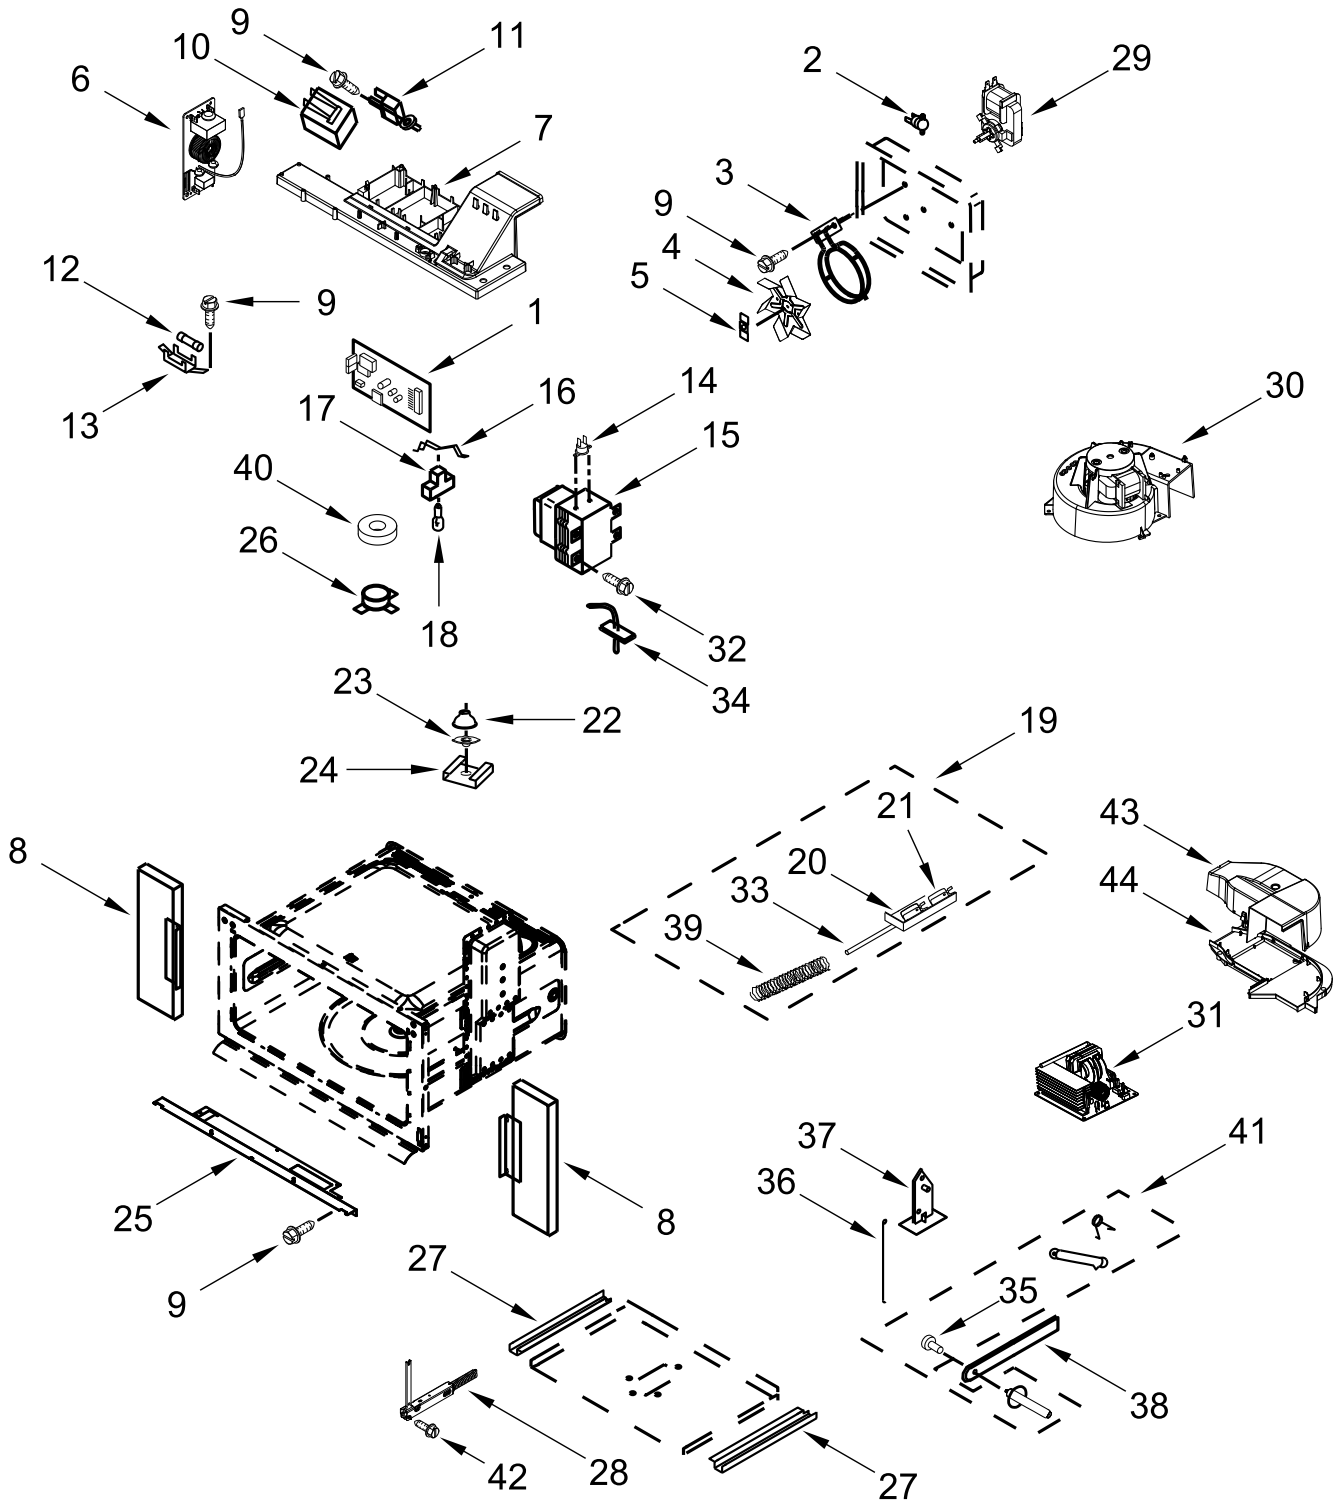

CABINET AND STIRRER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11290004	Control, Electronic	16	W10465869	Spring, Lamp	35	461967510191	Bushing
2	423107845441	Sensor, Convection	17	W10490593	Holder, Lamp	36	461967570351	Spring, Torsion
3	461967848711	Heater, Convection Element	18	W10795595	Lamp, Halogen	37	461967750494	Support
4	W11453899	Blade, Fan	19	W10358241	Assembly, Interlock Switch	38	W11213889	Arm, Sliding
5	W10120233	Nut, Speed	20	461967848881	Switch	39	423107570871	Spring, Release Rod
6	W11505129	Filter, Noise	21	W10876593	Holder, Switch	40	W10769147	Sealing, Lamp
7	461967754821	Duct, Magnetron	22	423107022541	Reflector	41	W10128850	Assembly, Sliding Arm
8	461967017491	Trim, Side (Left)	23	423107720491	Lens, Lamp	42	461967825781	Screw (Shoulder)
	461967017481	Trim, Side (Right)	24	W11440819	Clip, Spring	43	W11591019	Housing, Upper Inverter
9	461967825321	Screw	25	W11334716	Vent, Top Microwave	44	W11591018	Housing, Lower Inverter
10	461967848621	Transformer, Light (20V)	26	W10460457	Sensor, Humidity			FOLLOWING PARTS NOT ILLUSTRATED
11	461967842541	Thermoactuator	27	461967008461	Support, Bottom			
12	241908600053	Fuse	28	W11319465	Hinge, Door			
13	4375231	Block, Fuse	29	W11233698	Motor, Convection Fan	W11454022		Harness, Fan and Turntable
14	461967846741	Thermostat, Magnetron	30	W11131760	Cooling Fan Assembly	W11555168		Harness, Interlock
15	W11504545	Magnetron	31	W11504539	Inverter	W11539494		Harness, Inverter
			32	461967825381	Screw	W11539527		Jumper Harness, Communication
			33	461967750464	Rod, Push			
			34	241960100002	Sensor, Temperature			


MICROWAVE DOOR PARTS

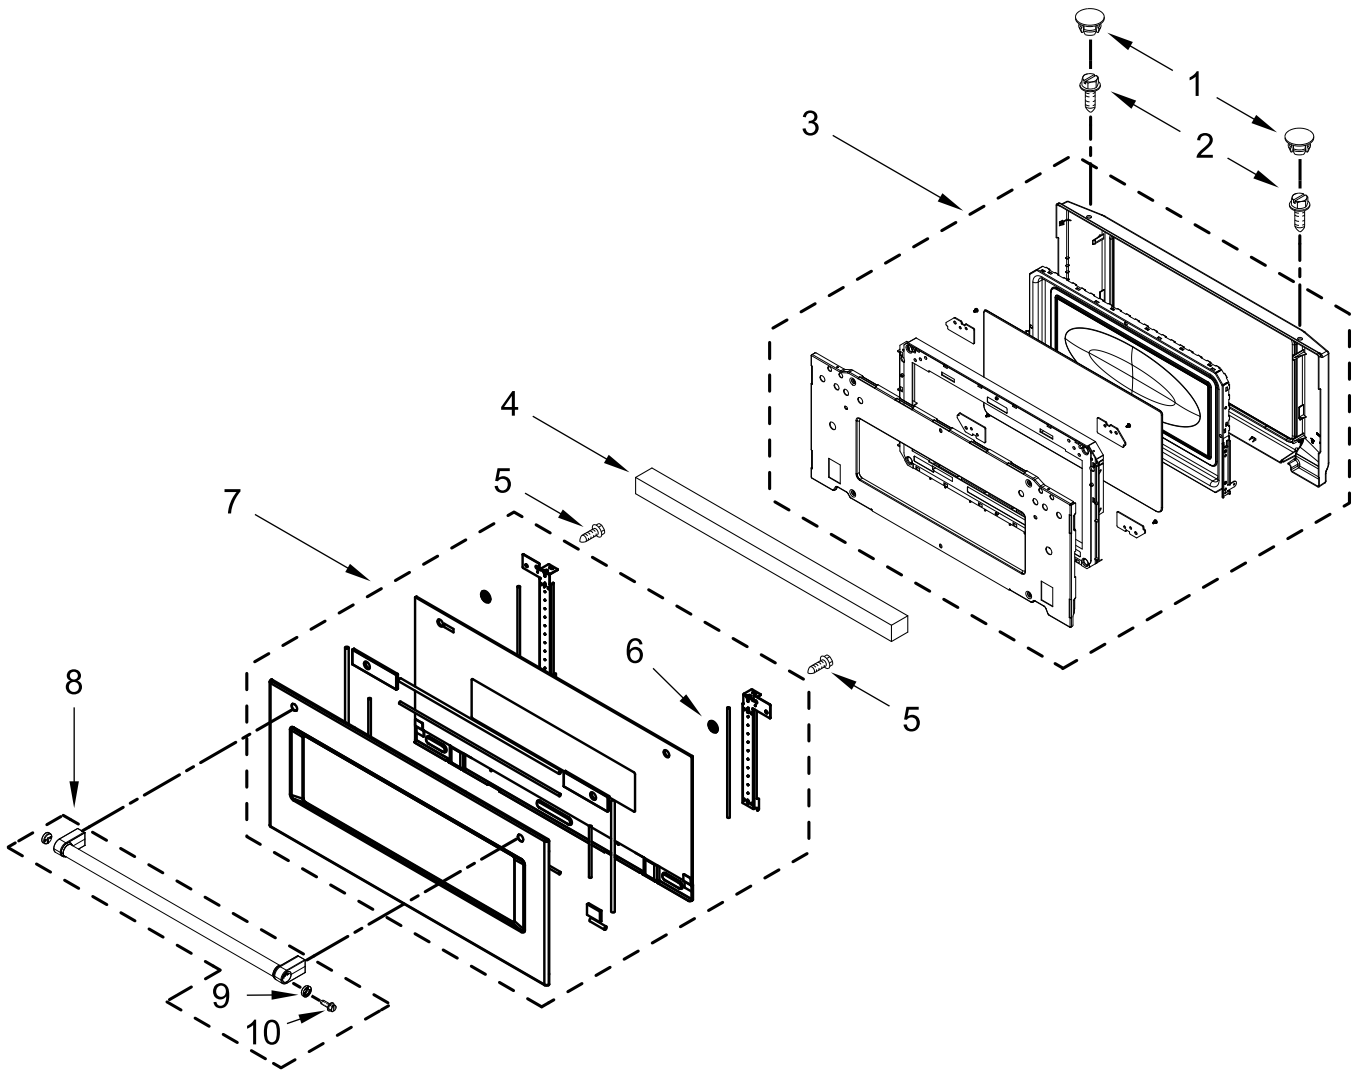

MICROWAVE DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	8304588BL	Cap, Screw	6	W10319024	Washer, Door	9	W10551026	Medallion, Handle
2	7101P338-60	Screw	7		Door Assembly	10	W10656499	Screw
3	W11639555	Inner Door Assembly		W11300490	Stainless			
4	W10359769	Foam, Door Handle		W11300496	Black Stainless			
5	W11317731	Screw (Black)	8		Handle Assembly			
				W11241572	Stainless			


INTERNAL MICROWAVE PARTS

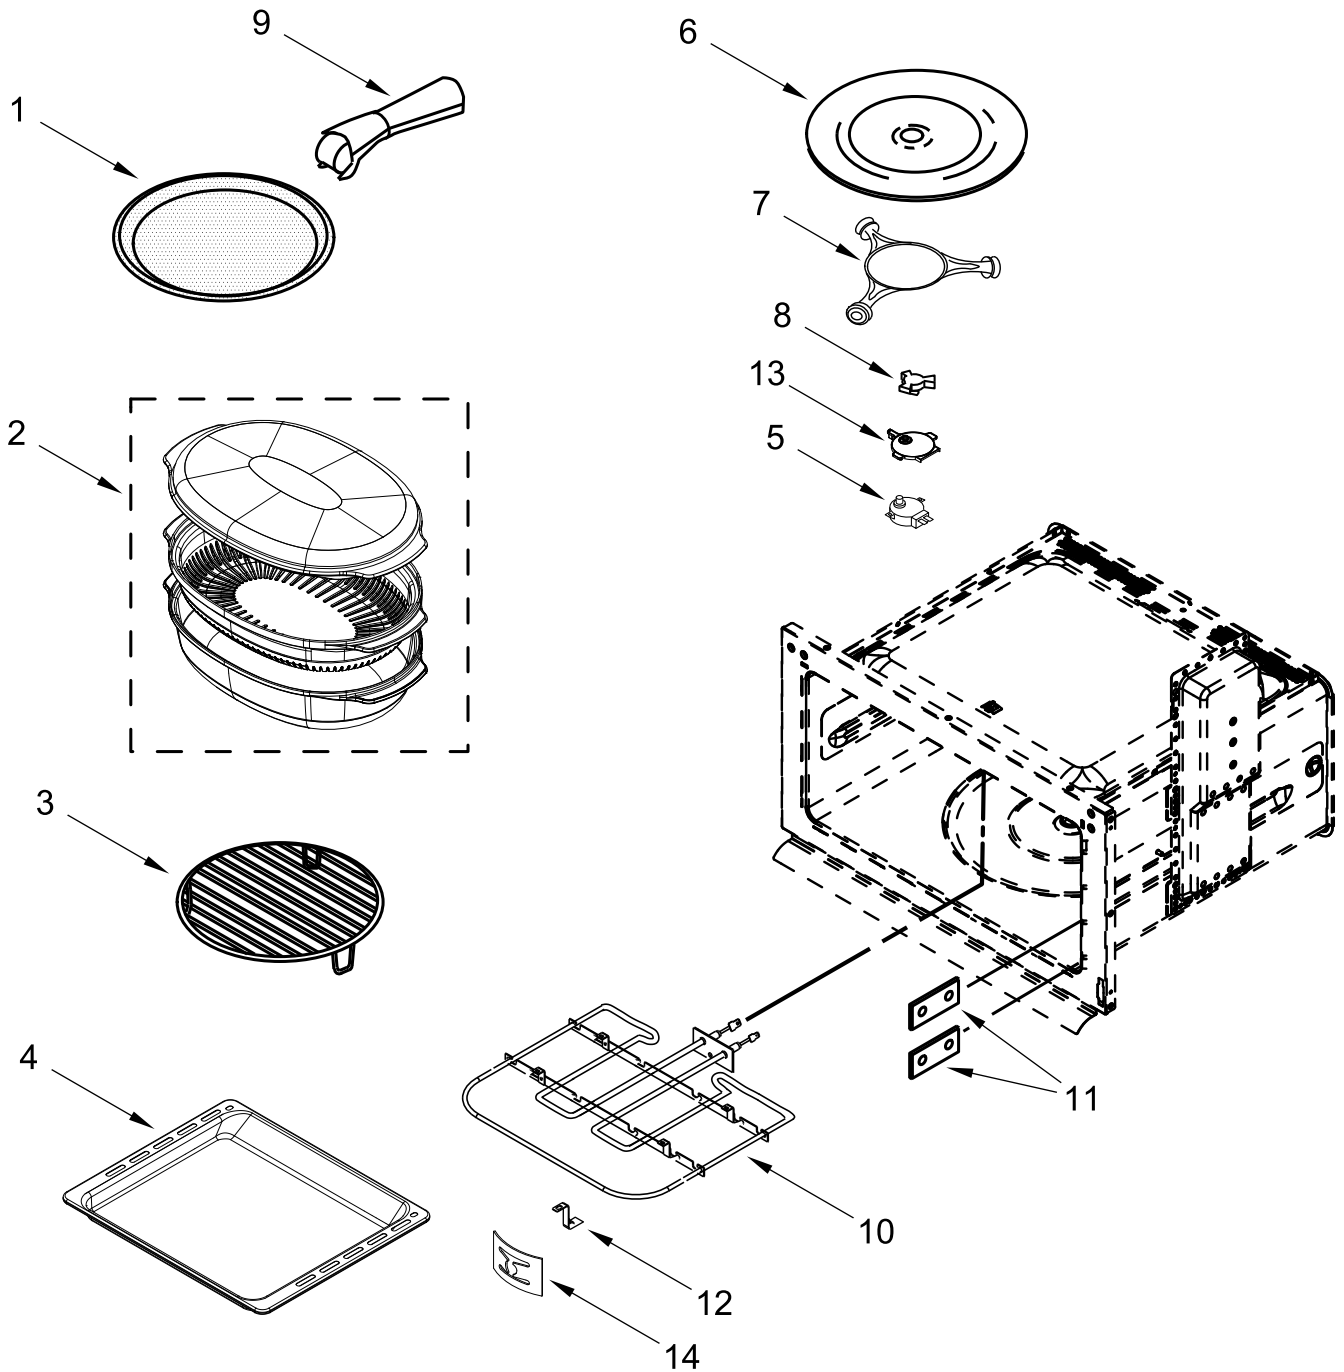

INTERNAL MICROWAVE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	461968977491	Plate, Crisp	7	W10367316	Ring, Turntable	13	461967753742	Adapter, Turntable Motor
2	W10796139	Steamer	8	W10545578	Drive, Turntable	14	252262898008	Support, Spring Lock Grill
3	W10748279	Rack, Low Convection	9	461968929542	Handle, Pan			
4	W10750839	Plate, Baking	10	W10387651	Element, Grill			
5	461967848971	Motor, Turntable	11	461967451001	Plate, Cover			
6	W11340343	Turntable	12	461967753871	Support, Element			


OVEN PARTS

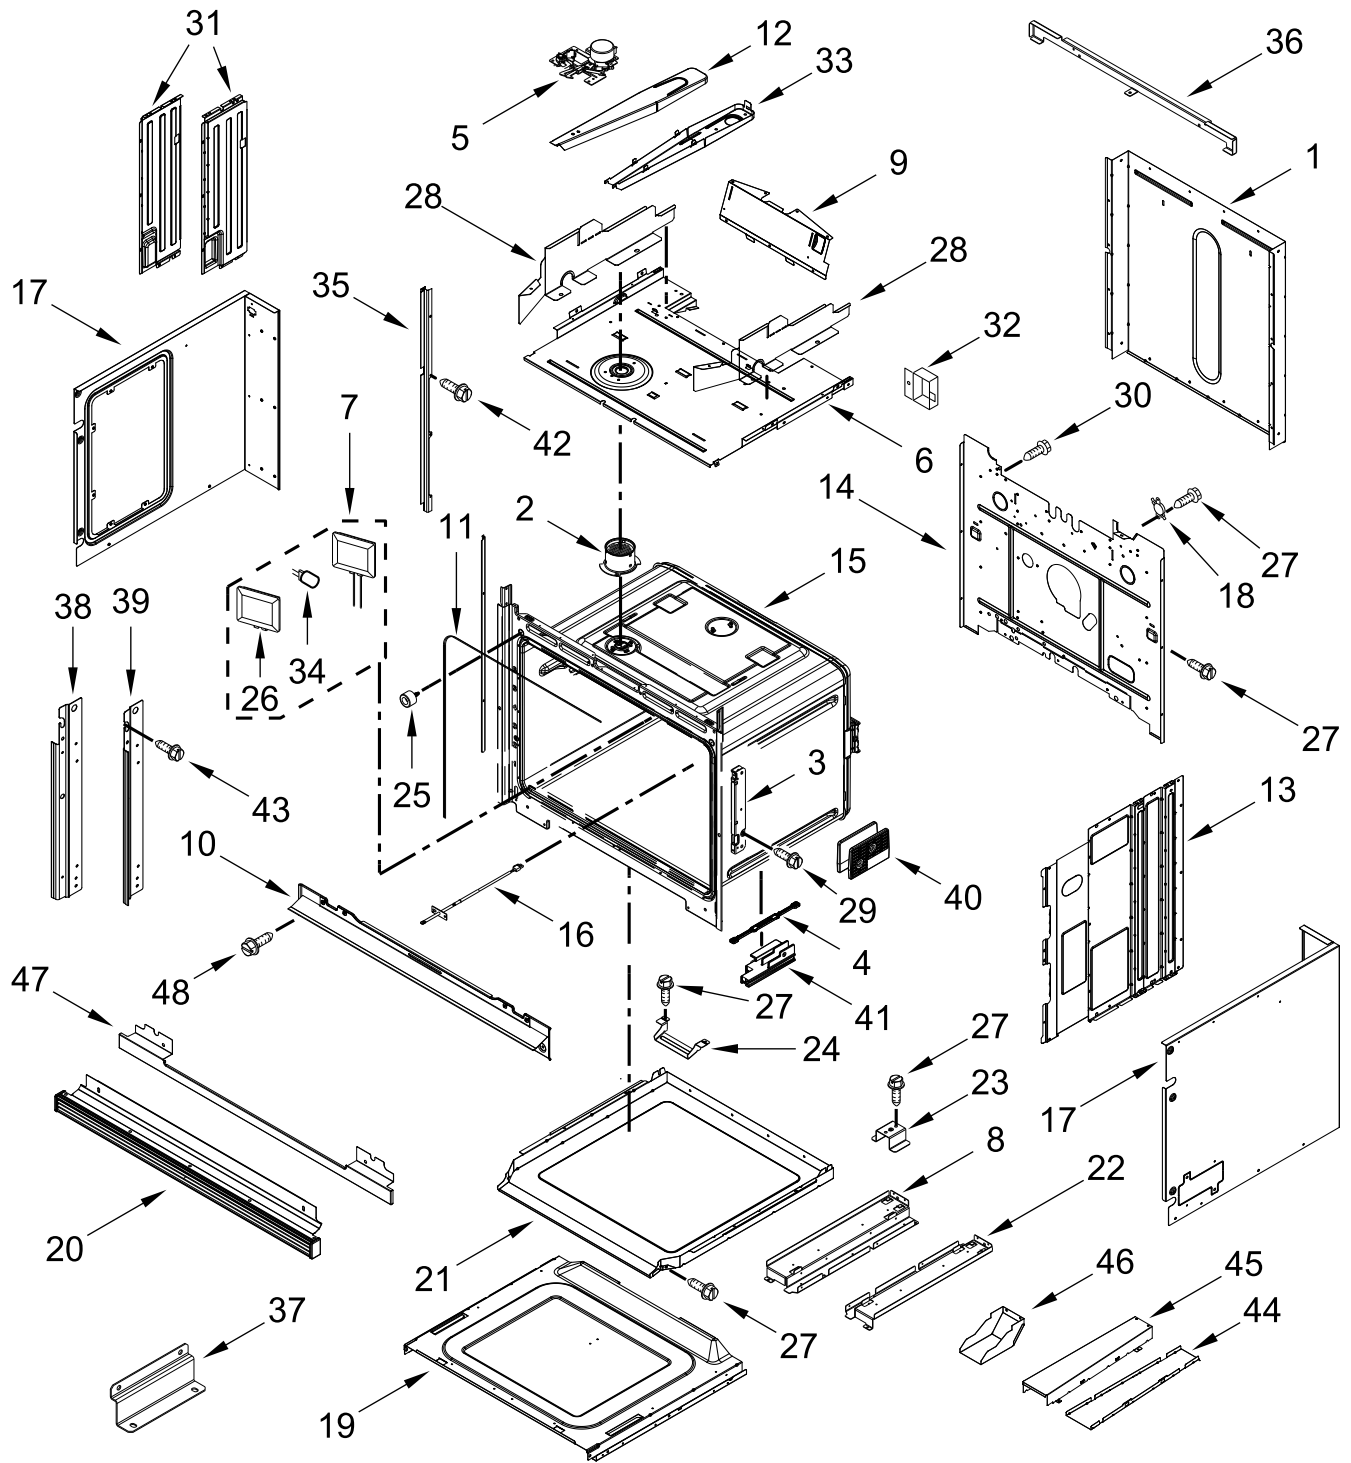

OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11134657	Duct, Lower Chassis Back	20		Assembly, Bottom Vent	36	W10283022	Support, Crossbar
2	W11085298	Tube, Vent		W11369892	Stainless	37	W10283024	Side, Bracket
3	W11239070	Receiver, Hinge (Left)		W11410028	Black Stainless	38	W11627410	Siderail, Combo (Left)
	W11239072	Receiver, Hinge (Right)	21	W11244446	Duct, Bottom Chassis	39	W11627411	Siderail, Combo (Right)
4	W11558603	Spacer, Base	22	W10283021	Support, Base (Right)	40	W11245118	Foot, Base
5	W11132456	Latch, Motorized	23	W11135135	Support, Air Channel	41	W11245114	Foot, Chassis (Left)
6	W11168071	Top, Chassis	24	W11390667	Spacer, Chassis Bottom Duct		W11245116	Foot, Chassis (Right)
7	W11205574	Assembly, Oven Light	25	W11166315	Bumper and Screw	42	W11404000	Screw
8	W10283020	Support, Base (Left)	26	W10472386	Lens, Light	43	7101P633-60	Screw (Black)
9	W10904163	Deflector, Blower	27	7101P426-60	Screw	44	W11256430	Base, Lower Back Exhaust
10	W11518347	Vent, Combo Center	28	W11186391	Deflector, Chassis (Left)	45	W11256431	Cover, Lower Back Exhaust
11	W11608108	Gasket		W11186398	Deflector, Chassis (Right)	46	W11256432	Deflector, Lower Back Exhaust
12	W11256421	Cover, Top Back Exhaust	29	W10254050	Screw	47		Trim, Bottom Vent
13	W11165274	Side, Chassis	30	W10142292	Screw		W11356753	Black
14	W11244441	Back, Chassis	31	W11167419	Cover, Suction (Left)	48	W11249635	Screw
15		Liner, Oven (Not Serviceable)		W11186675	Cover, Suction (Right)			FOLLOWING PARTS NOT ILLUSTRATED
16	W11346074	Probe, Sensor	32	8285593	Cover, Connector		W11188284	Insulation, Wrap
17	W11171909	Side, Combo Chassis (Left)	33	W11256420	Base, Top Back Exhaust		W11234758	Insulation, Cavity
	W11171919	Side, Combo Chassis (Right)	34	W10472384	Bulb, Light			
18	4449751	Thermostat (TOD)	35		Trim, Side			
19	W11135103	Base, Chassis		W11235457	Black (Left)			
				W11235458	Black (Right)			


OVEN DOOR PARTS

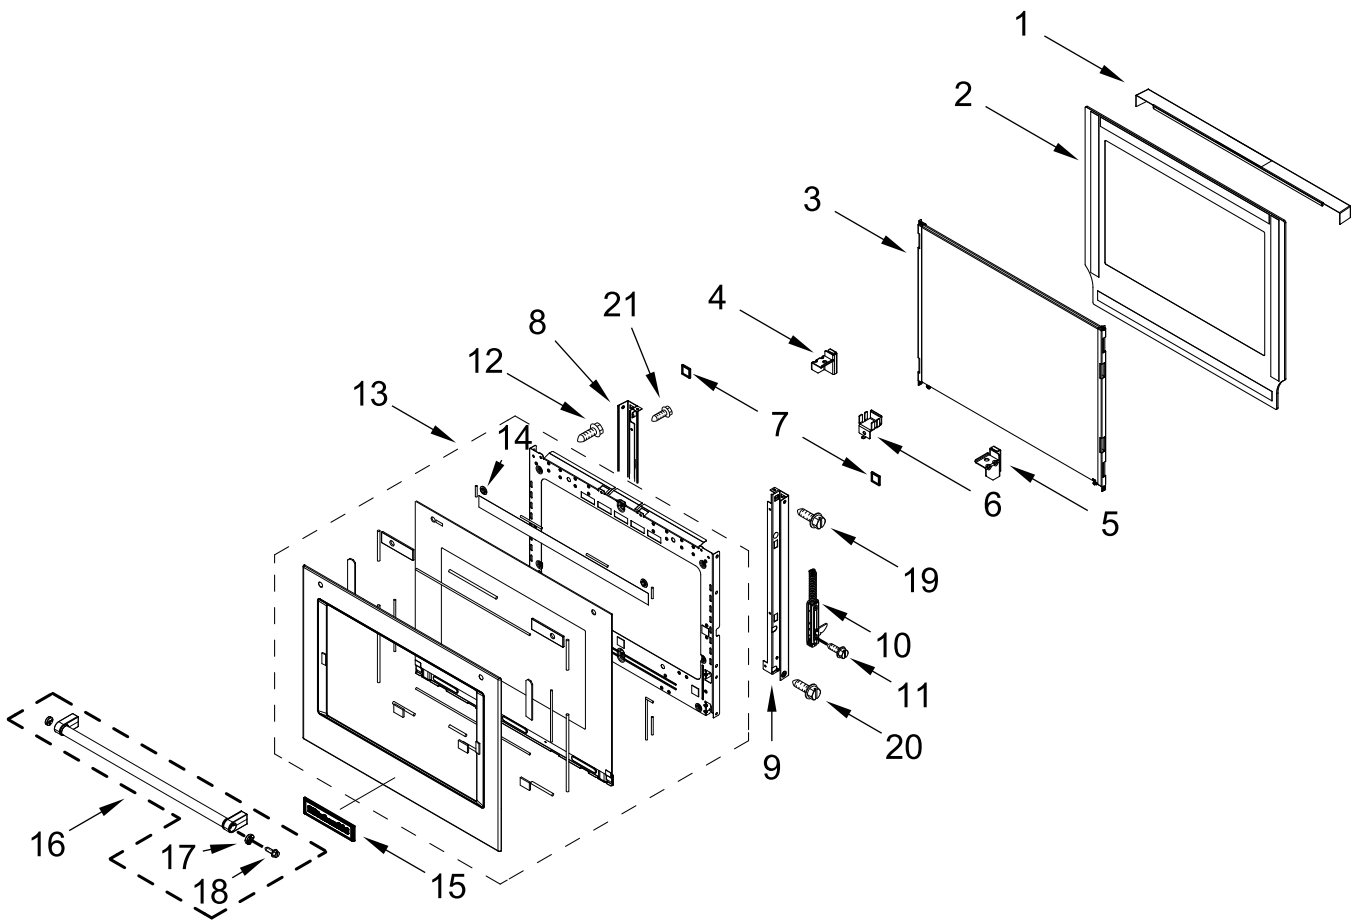

OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11597415	Top Vent Trim Assembly	8	W11302773	Rail, Door (Left)	15	W10518672	Badge
2	W11260091	Glass Cavity Assembly	9	W11302780	Rail, Door (Right)	16		Handle Assembly
3	W11304273	Air Divider Assembly	10	W11296041	Hinge, Door (Left)		W11241572	Stainless
4	W11302803	Bracket, Glass (Left)		W11296043	Hinge, Door (Right)	17	W10551026	Medallion, Handle
5	W11302802	Bracket, Glass (Right)	11	3196183	Screw	18	W10656499	Screw
6	W11302954	Bracket, Glass Reinforcement	12	W11317731	Screw (Black)	19	694091	Screw
7	W10517428	Spacer, Vent	13		Door Assembly	20	W11290045	Screw
				W11295957	Stainless	21	W10443110	Screw
				W11295959	Black Stainless			
			14	W10319024	Washer, Door			


INTERNAL OVEN PARTS

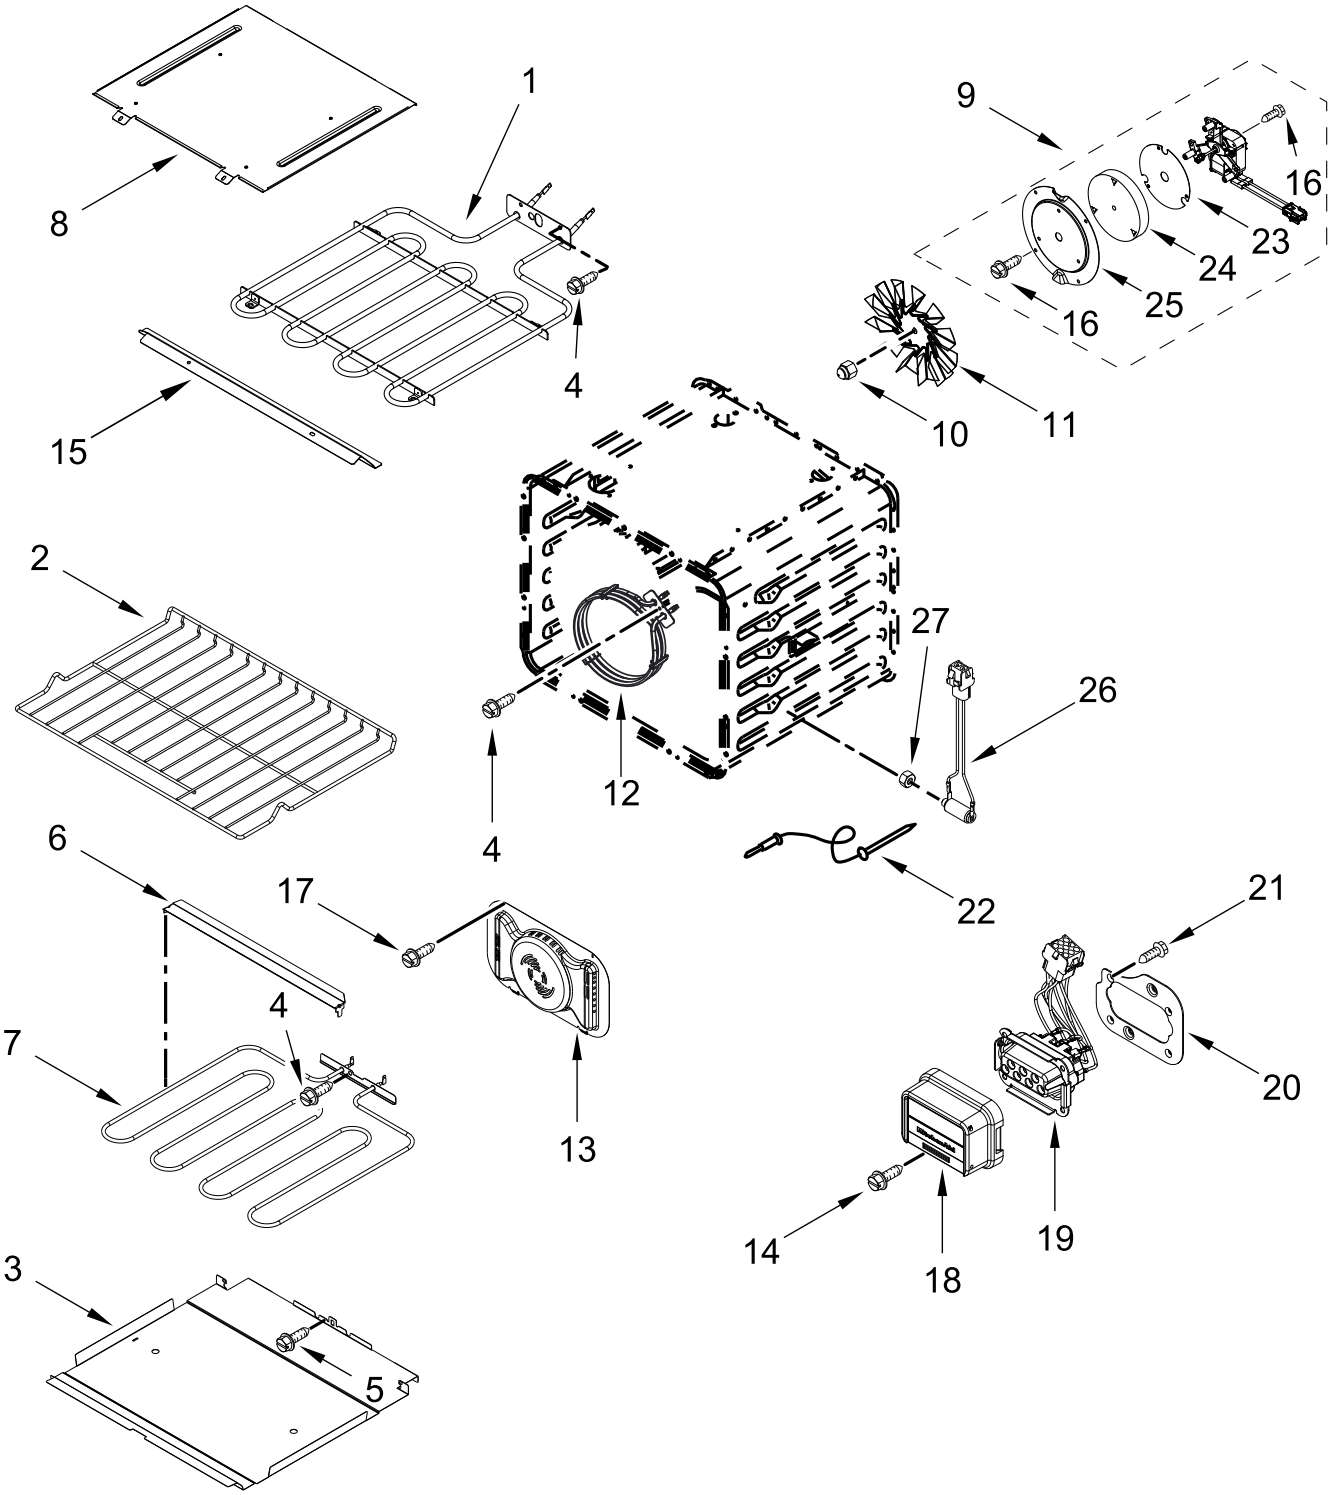

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11238159	Element, Broil	11	W11425715	Blade, Fan	21	W11249635	Screw
2	W10554526	Rack, Oven	12	W10546519	Element, Convection	22	9755542	Probe, Temperature
3	W10318198	Tray, Hidden Bake	13	W10918895	Baffle, Bow Tie	23	W11251715	Plate, Convect Motor
4	7101P434-60	Screw	14	W11236393	Screw	24	W11251716	Insulation, Convect Motor
5	7101P426-60	Screw	15	W10588737	Shield, Broil Front	25	W11235449	Cover, Convect Plate
6	W10282957	Crossbar, Hidden Bake Tray	16	W10720084	Screw	26	W11252826	Jack, Meat Probe
7	W11292248	Element, Bake	17	W10739592	Screw	27	W11033111	Nut, Locking
8	W11235537	Reflector, Broil	18	W10903893	Cover, Connector			
9	W11244895	Convect Motor Assembly	19	W10903862	Connector, Plug Assembly Accessory			
10	W11433702	Nut, Acorn (LH)	20	W11307587	Plate, Cavity Backer			

POWERED ACCESSORY PARTS

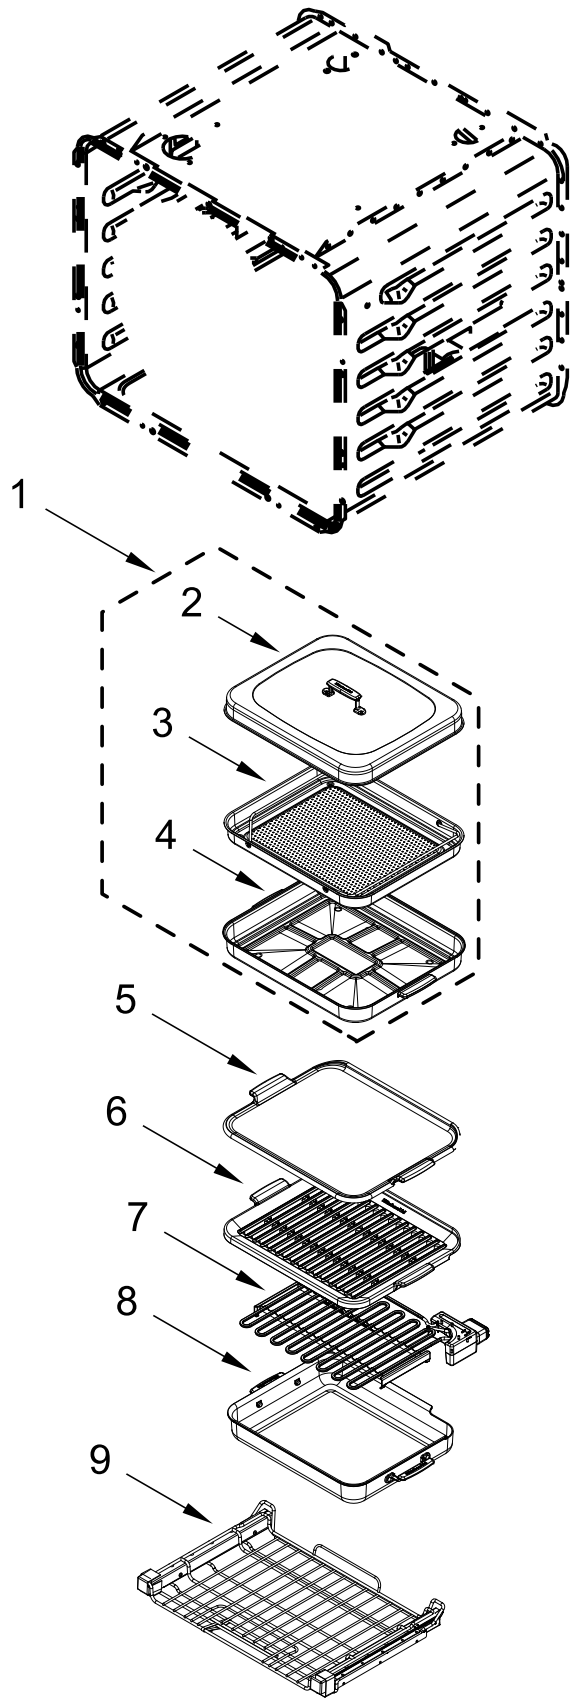

POWERED ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10862029	Steamer, Power Accessory	4	W10862030	Pan, Steamer Water	8	W10862025	Pan, Base
2	W10862032	Lid, Steamer	5	W10862028	Stone, Baking	9	W10823215	Rack, Powered Accessory
3	W10862031	Pan, Steamer Perforated	6	W10862027	Plate, Grill			
			7	W10866323	Unit, Heating			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		PAINT, TOUCH-UP (1/2oz.)
	72017	White
	72032	Black
		PAINT, SPRAY
	350930	White
	261900	Citrine White
	830864	Black
		ADHESIVE
	482338	Sealer, Silastic
		ACCESSORIES
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting
		Medallion, Handle
	W10846205	Chrome
	W10846206	Black
	W10846207	Red
		Assembly, Bottom Vent
	W11369884	Black